



## A7258CH ASSEMBLY INSTRUCTION

CAREFULLY TAKE THE FIXTURE OUT OF THE CARTON, AND CHECK THAT ALL THE PARTS ARE INCLUDED (REFERRING TO THE FIXTURE DRAWING). BE SURE NOT TO MISPLACE ANY PARTS THAT ARE NEEDED TO INSTALL THIS FIXTURE.

1. ①+② LOOSEN THE LOOP FROM THE UPPER WIRE HOUSE, FIX THE LAMP ARM INTO IT BY ATTACHED WRENCH
2. ③+④+⑤ LOOSEN THE UPPER KNOB FROM THE BOTTOM WIRE HOUSE, FIX THE LAMP ARM INTO IT BY WRENCH, FIX THE BOTTOM KNOB IN PROPER TIGHT
3. ⑥ FIXING THE LOOP
4. ⑦+⑧+⑨ UNLOCK THE SAFETY HOOK FROM THE CHAIN, ATTACH THE LOOP IN AND LOCK THE SAFETY HOOK, PUT THE CHAIN ON A NEEDED LENGTH AND REMOVE THE EXCESS.
5. ⑩ RUN WIRE THROUGH CHAIN, SLIP RING FIRST AND CANOPY SECOND TO THE BOTTOM OF THE CHAIN AND LET REST ON LOOP UNTIL WIRING IS CONNECTED.
6. ⑪+⑫+⑬ LOOSEN THE SAFETY HOOK FROM THE CHAIN, ATTACH THE LOOP IN AND LOCK THE SAFETY HOOK

7. ⑭ MOUNTING THE BRACKET TO ELECTRICAL BOX WITH SCREWS

8. ⑮ ATTACH THE FIXTURE WIRE TO THE HOUSE WIRE : GOUND WIRE TO GROUND WIRE ; WHITE (NEUTRAL) WIRE TO WHITE WIRE ; BLACK (HOT) WIRE TO BLACK WIRE
9. ⑯+⑰ FIX THE CANOPY TO CEILING BY INSIDE KNURLING RING
10. ⑱ PLACE BULBS (INCL.) INTO FIXTURE SOCKETS, DO NOT EXCEED MAXIMUM WATTAGE INDICATED
11. ⑲ PLACE CRYSTAL STRANDS ONTO FIXTURE , FOLLOW THE SEQUIENCE ON THE DIAGRAM PROVIDED