



## ASSEMBLY INSTRUCTIONS

---

- CAUTION:** 1. TURN OFF THE ELECTRICITY AT THE FUSE BOX OR CIRCUIT BREAKER BEFORE INSTALLATION.
2. RISK OF FIRE:DO NOT LAMP FIXTURE GREATER THAN THE MAXIMUM WATTAGE SHOWN ON THE WATTAGE LABELS ON THE FIXTURE.
3. IF YOU ARE UNFAMILIAR WITH ELECTRIC WIRING, CONSULT A QUALIFIED ELECTRICIAN TO INSTALL THIS FIXTURE FOR YOU.
4. THIS FIXTURE HAS BEEN CAREFULLY INSPECTED AND PACKED TO ENSURE PROTECTION TO GLASS.TAKE PARTICULAR CARE WHEN REMOVING GLASS FROM THE BOX AND MOUNTING IT ONTO THE FRAME, AS IT IS EXTREMELY FRAGILE.

### **Attention:**


Veillez couper l'electricité de votre boîte de disjonction avant l'installation.

Risque de feu: N'utilisez pas d'ampoule avec plus de watts que le maximum recommandé.




Si vous n'êtes pas familié avec l'électricité, veuillez consulter un électricien pour l'installation de votre luminaire.

Ce luminaire a été vérifié et emballé avec grand soin pour une protection maximale de votre verre. A cause de la fragilité de ce verre, S.V.P. toujours manipuler ce verre minutieusement.

1. PRENEZ SOIGNEUSEMENT LE MONTAGE HORS DU LE CARTON, ET VÉRIFIENT QUE TOUTES PIÈCES SONT INCLUSES SE RAPPORTANT À CE QUI PRÉCÈDE SCHÉMA. SOYEZ SÛR DE NE MAL PLACER AUCUNE PIÈCE QUI SONT NÉCESSAIRE POUR INSTALLER CECI MONTAGE.

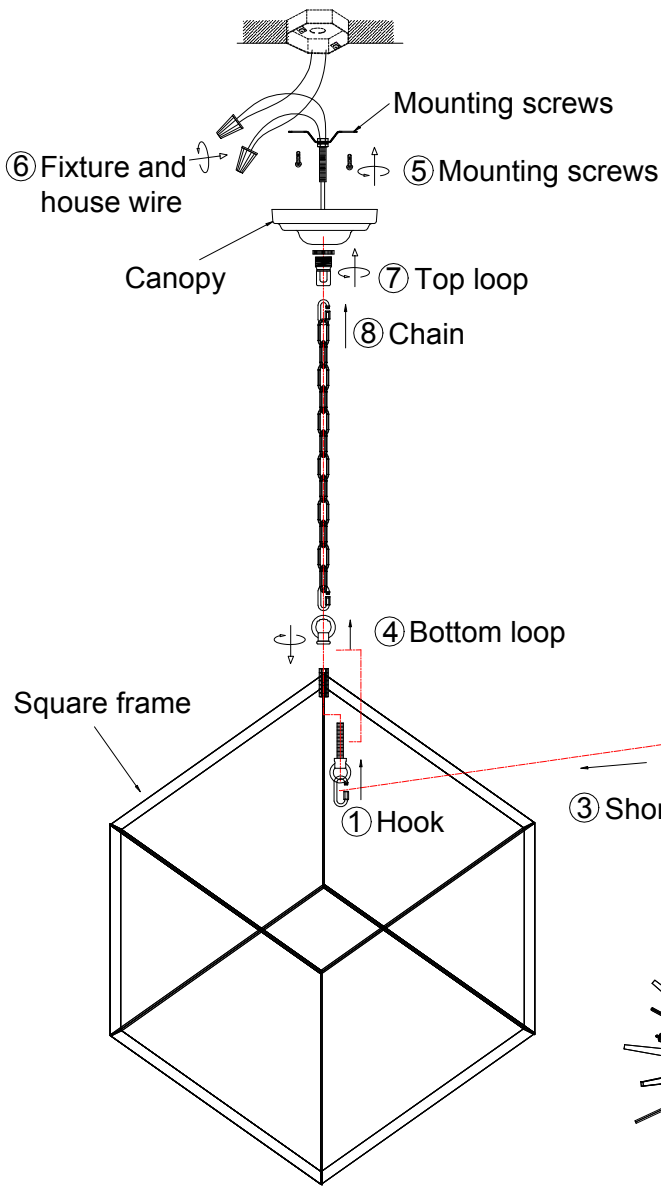

**Diagram for crystal and metal rods:**

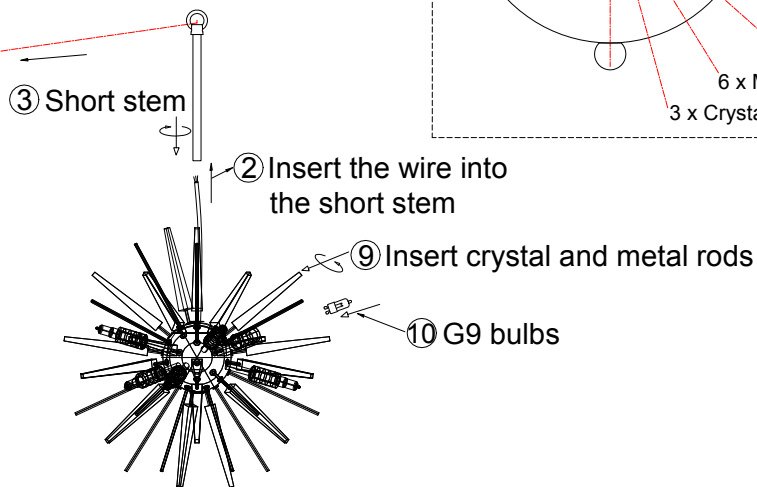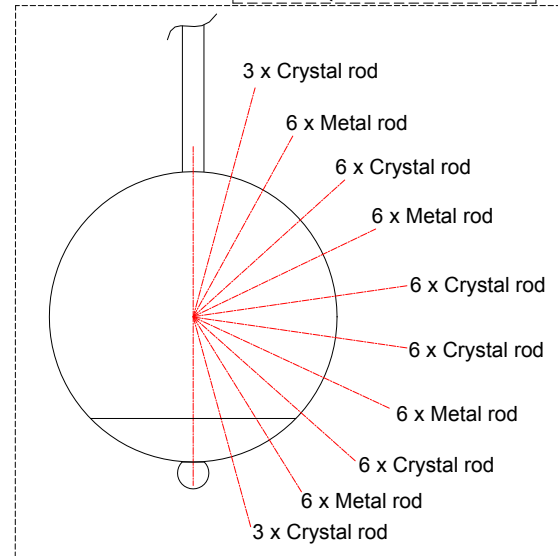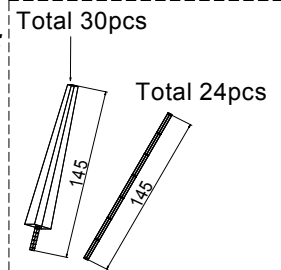

**A8824BKCH / ASSEMBLY INSTRUCTION**

CAREFULLY TAKE THE FIXTURE OUT OF THE CARTON, AND CHECK THAT ALL THE PARTS ARE INCLUDED (REFERRING TO THE FIXTURE DRAWING). BE SURE NOT TO MISPLACE ANY PARTS THAT ARE NEEDED TO INSTALL THIS FIXTURE.

1. ATTACH THE HOOK (1) TO THE SQUARE FRAME.
2. INSERT THE ELECTRICAL WIRE (2) INTO THE SHORT STEM (3) THEN ATTACH ONTO THE HOOK (1).
3. SECURE THE BOTTOM LOOP (4) ONTO THE SQUARE FRAME.
4. ATTACH MOUNTING BRACKET TO ELECTRICAL BOX, USING SCREWS (5).
5. ATTACH THE FIXTURE WIRE TO THE HOUSE WIRE (6), FOLLOWING THESE STEPS:
  - (A) CONNECT GROUND WIRE FROM FIXTURE TO GROUND WIRE (SCREW) IN THE ELECTRICAL BOX.
  - (B) CONNECT WHITE (NEUTRAL) WIRE FROM THE FIXTURE TO WHITE WIRE IN THE ELECTRICAL BOX.
6. SECURE THE CANOPY LOOP (7) TO THE MOUNTING BRACKET WITH THREAD ROD.
7. ATTACH THE CHAIN (8) TO THE LOOP OF THE FIXTURE (4).
8. PLACE THE OTHER END OF THE CHAIN (8) TO THE CANOPY LOOP (7).
9. DETERMINE THE LENGTH OF CHAIN (8) REQUIRED AND REMOVE THE EXCESS. THEN RUN WIRE THROUGH CHAIN. SLIP CANOPY TO THE BOTTOM OF THE CHAIN AND LET REST ON LOOP OF FIXTURE UNTIL WIRING IS CONNECTED. SLIP CANOPY UP OVER CHAIN AND SECURE CANOPY AGAINST CEILING WITH RING.
10. PLACE CRYSTAL AND METAL RODS (9) ONTO FIXTURE. FOLLOWING THE SEQUENCE ON THE DIAGRAM PROVIDED.
11. PLACE BULBS (10) (INCLUDED) INTO FIXTURE SOCKETS. DO NOT EXCEED MAXIMUM WATTAGE INDICATED.